



Languages: **English** | Arabic | Chinese Simplified | More | Quick Translate

Show All

Collapse All

HP printer setup (Chromebook)

ish_2059279-1992970-16 | Public

Last modified date: 2023-02-10

Set up a network or USB connected printer with a Chromebook.

1

Set up the printer with the HP Smart app (HP+ printers only)

To print from a Chromebook, you must set up the HP+ printer with the HP Smart app on a different computer or mobile device. This is necessary to activate the HP+ features and connect the printer to the internet.

⚠ CAUTION: Failure to register your HP+ printer with HP might cause your printer to stop working.

1. Install the HP Smart app from 123.hp.com or your app store.
2. Open the HP Smart app, and then follow the prompts to create an account, set up the hardware, and activate the HP+ features.

For more information, go to [HP+ printer setup \(HP Smart app\)](#).


2

Add the printer to the Chromebook

Connect the printer to your Chromebook with a Wi-Fi or USB cable connection to complete the setup. No drivers or apps are required to set up your printer.


connected to, or use a direct USB connection.

- Wi-Fi connection for printers with a touchscreen control panel: Open the **Setup**, **Network**, or **Wireless settings** menu, select **Wireless Setup Wizard**, and then follow the instructions to select the network name and enter the password.
 - Wi-Fi connection for most printers without a touchscreen control panel: Press and hold the Wireless button  for five seconds or until the wireless light starts to flash. Within two minutes, press and hold the WPS (Wi-Fi Protected Setup) button on the router until the connection process begins. The printer wireless light stops flashing when the connection completes.
 - Wi-Fi connection for HP Deskjet 6000 and 6400, ENVY 6000 and 6400, and Tango printers: Press and hold the Wi-Fi button  and the Power button on the back of the printer for five seconds until the blue bar flashes. Within two minutes, press and hold the WPS button on the router until the connection process begins. The blue bar stops flashing when the connection completes.
 - Wired (Ethernet) network connection: Connect the network cable to the printer Ethernet port  and to an available port on the router or access point. At the printer port, the green light should be steady and the orange activity light should blink.
 - USB connection: Connect the cable to the USB port on the rear of the printer  and to an available port on the Chromebook.
3. On the Chromebook, click the clock in the bottom right corner, and then click the **Settings** icon .
 4. Scroll to the bottom of the screen, and then click **Advanced**.
 5. Under **Printing**, click **Printers > Add Printer**.
 - If your printer displays, select it, and then click **Add**.
 - If your printer does not display, click **Add Manually**, and then follow the instructions. For more information, go to [Chromebook Help - Set up your printer](#) (in English).

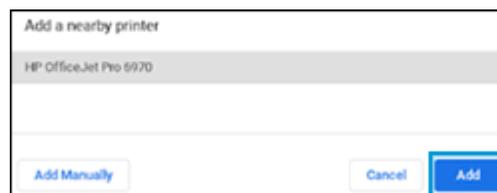


1. Open the item you want to print.

2. Click the Chrome browser **Settings** icon , and then select **Print**.

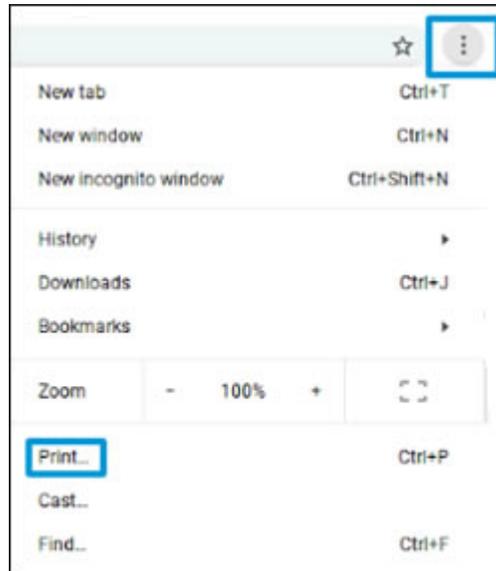

3. Next to **Destination**, click **Change**, and then select your printer.

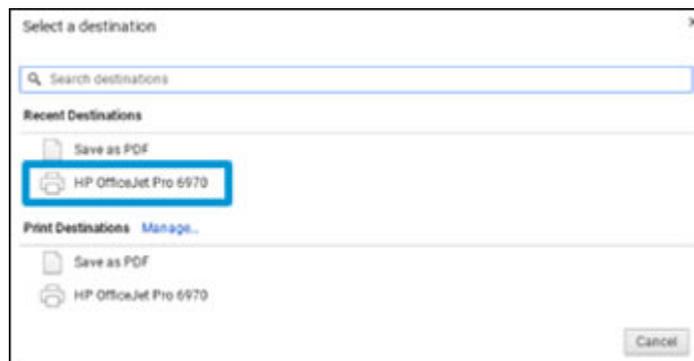

4. Change any desired print settings, and then click **Print**.

Frequently asked questions (FAQs)

Still have a question? Find additional answers and help.

 **Is my printer compatible with Chrome in-OS printing?**

 **Can I manage enterprise printing in Chrome?**



Hello, Bobby ▾



[Use](#) | [Privacy](#)